






## 0438 - POWER STEERING & TRANSMISSION LINK TUBE NUTS & ADAPTER ASSORTMENTS

 <p><b>3006</b> 5/16" TUBE NUT POWER STEERING TRANSMISSION FUEL</p> <p>2</p>	 <p><b>3015</b> 3/8" TUBE NUT POWER STEERING TRANSMISSION FUEL</p> <p>2</p>	 <p><b>3145</b> POWER STEERING &amp; FUEL REPAIR LINE 3/8" X 4"</p> <p>2</p>
 <p><b>3146</b> POWER STEERING &amp; FUEL REPAIR LINE 5/16" X 4"</p> <p>2</p>	 <p><b>3418</b> BRASS TRANSMISSION LINE ADAPTER 5/16" TUBE FEMALE TO 3/8" TUBE MALE (5/8 - 18) (5/8" WRENCH)</p> <p>2</p>	 <p><b>3419</b> BRASS TRANSMISSION LINE ADAPTER 3/8" TUBE FEMALE TO 5/16" TUBE MALE (1/2 - 20) (3/4" WRENCH)</p> <p>2</p>
 <p><b>3434</b> STEEL POWER STEERING LINE TUBE NUT 3/8" TUBE FEMALE TO 16MM X 1.5 MALE (16MM WRENCH)</p> <p>4</p>	 <p><b>3435</b> STEEL POWER STEERING LINE TUBE NUT 3/8" TUBE FEMALE TO 16MM X 1.5 MALE (18MM WRENCH)</p> <p>4</p>	 <p><b>3436</b> STEEL POWER STEERING LINE TUBE NUT 3/8" TUBE FEMALE TO 18MM X 1.5 MALE (18MM WRENCH)</p> <p>4</p>
 <p><b>3438</b> STEEL POWER STEERING LINE TUBE NUT 3/8" TUBE FEMALE TO 18MM X 1.5 MALE (18MM WRENCH)</p> <p>4</p>	 <p><b>3442</b> 3/8" TUBE FEMALE TO 5/8" - 18 (5/8" WRENCH)</p> <p>4</p>	 <p><b>3443</b> 5/16" TUBE FEMALE TO 5/8" - 18 (5/16 TO 3/8 ADAPTER NUT) MALE (5/8 WRENCH)</p> <p>3</p>